

KanexPro®

HDMX42-18G

4K UHD+ 4x2 HDMI® Matrix



4K/60Hz 4x2 HDMI® 2.0 Matrix Switcher

All Rights Reserved

MPN: HDMX42-18G

SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply.

Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to buildingsurfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

CONTENTS

1.	Introduction	1
2.	Applications.....	1
3.	Package Contents	1
4.	System Requirements	2
5.	Features	2
6.	Operation Controls and Functions.....	3
6.1	Front Panel.....	3
6.2	Rear Panel	4
6.3	Remote Control.....	4
6.4	IR Cable Pin Assignments	5
6.5	RS-232 Protocol.....	5
6.6	RS-232 and Telnet Commands	6
6.7	Telnet Control	10
6.8	WebGUI Control.....	11
6.8.1	Device Discovery APP	11
6.8.2	WebGUI Control Page	12
7.	Connection Diagram.....	17
8.	Specifications	18
8.1	Technical Specifications.....	18
8.2	Video Specifications.....	19
9.	Acronyms.....	20

1. INTRODUCTION

The KanexPro HDMX42-18G is an easy to use, cost-effective 4K/60Hz with 4:4:4, 16-bit Deep Color, HDR (High Dynamic Range) and HD audio formats based on HDMI 2.0 specs. Designed with 4-inputs and 2-outputs. For swift switching and routing of any HDMI sources such as laptops, Blu-ray players, and 4K based Apple TV to any four displays. This matrix switcher is HDCP 2.2 compliant and supports 4K@60Hz, 4:2:0 video. It can be controlled via front panel buttons, IR remote and RS232 commands.

EDID Management & Control

Five pre-defined internal EDIDs and two external EDID options are available for EDID management. The unit provides intuitive front panel controls as well as RS-232, Telnet, WebGUI and IR remote control options.

Applications:

Ideal for classrooms, corporate offices, retail stores and home theaters where there is a need to route four HDMI sources to four displays.

2. PACKAGE CONTENTS


- 1×4 by 2 HDMI Matrix
- 1×Remote Control (CR-155)
- 1×IR Extender Cable
- 1×5V/2.6A DC Power Adaptor
- 1×Operation Manual

3. SYSTEM REQUIREMENTS

- HDMI source equipment such as media players, video game consoles or set-top boxes.
- HDMI receiving equipment such as HDTVs, monitors or audio amplifiers.
- The use of "Premium High Speed HDMI" cables is highly recommended.


4. OPERATION CONTROLS AND FUNCTIONS

4.1 Front Panel

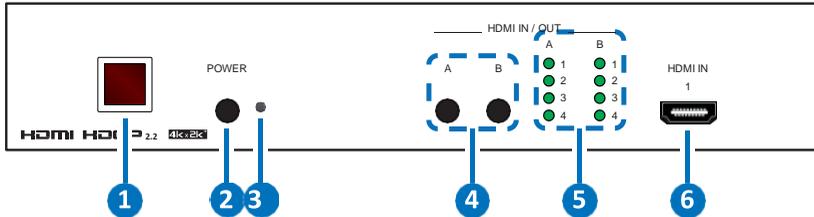

- ① **IR WINDOW:** Accepts IR signals from the included IR remote for control of this unit only.
- ② **POWER:** Press this button to power on the unit or place it into stand-by mode.
Note: Ethernet and RS-232 remain active while the unit is in stand-by mode.
- ③ **POWER LED:** This LED will illuminate GREEN to indicate the unit is on and receiving power. When the unit is in stand-by mode the LED will illuminate RED.
- ④ **HDMI OUT A~B:** Press either of these buttons to sequentially switch through the available inputs for the associated output.
- ⑤ **HDMI OUT LEDs 1~4:** The LED in each column will illuminate GREEN to indicate which source is currently selected for each output.
- ⑥ **HDMI IN 1:** Connect to HDMI source equipment such as a media player, game console or set-top box. DVI sources are also supported with the use of an HDMI to DVI adapter.


4.2 Rear Panel

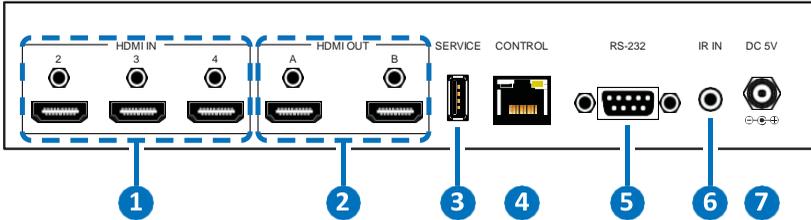


- ① **HDMI IN 2~4** : Connect to HDMI source equipment such as a media player, game console or set-top box. DVI sources are also supported with the use of an HDMI to DVI adapter.
- ② **HDMI OUT A~B**: Connect to HDMI TVs, monitors or amplifiers for digital video and audio output. DVI displays are also supported with the use of an HDMI to DVI adapter.
- ③ **ERVICE**: This slot (USB 2.0) is reserved for firmware update use only.
- ④ **ONTROL**: Connect directly, or through a network switch, to your PC/laptop to control the unit via Telnet/WebGUI.
- ⑤ **RS-232**: Connect directly to your PC/laptop to send RS-232 commands to control the unit.
- ⑥ **IR IN**: Connect to the provided IR Extender to extend the IR control range of the unit. Ensure that the remote being used is within direct line-of-sight of the IR Extender.
- ⑦ **DC 5V**: Plug the 5V DC power adapter into the unit and connect it to an AC wall outlet for power.

4.3 Remote Control

- ① **POWER**: Press this button to power on the unit or place it into stand-by mode.
- ② **A1~A4 & B1~B4**: Press these buttons to change the routing of outputs A & B.

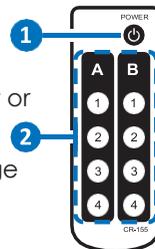

4.4 IR Cable Pin Assignments

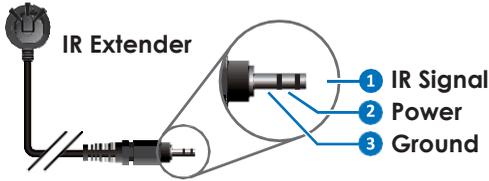

4.5 RS-232 Protocol

UNIT	
Pin	Definition
1	NC
2	TxD
3	RxD
4	NC
5	GND
6	NC
7	NC
8	NC
9	NC



REMOTE SYSTEM	
Pin	Definition
1	NC
2	RxD
3	TxD
4	NC
5	GND
6	NC
7	NC
8	NC
9	NC

Baud Rates: 115200bps

Data Bits: 8

Parity Bits: None

Stop Bit: 1

Flow Control: None

4.6 RS-232 and Telnet Commands

COMMAND	DESCRIPTION AND PARAMETERS
HELP	Displays all available commands.
?	Displays all available commands.
P0	Turn unit's power off. (Stand-by mode)
P1	Turn unit's power on.
INNAME N1 N2	Set the name of input N1 to N2. N1 = 1~4 [Input number] N2 = {name} [8 characters max]
INNAME N1	Show the input name of N1. N1 = 1~4 [Input number]
INNAME	Show the names of all inputs.
OUTNAME N1 N2	Set the name of output N1 to N2. N1 = A~B [Output letter] N2 = {name} [8 characters max]
OUTNAME N1	Show the name of output N1. N1 = A~B [Output letter]
OUTNAME	Show the names of all outputs.
A N1	Set the input to be routed to output A. N1 = 1~4 [Input number]
A	Show the current input routing for output A.
B N1	Set the input to be routed to output B. N1 = 1~4 [Input number]
B	Show the current input routing for output B.
OUT N1	Set a single input to be routed to both outputs (A & B). N1 = 1~4 [Input number]

COMMAND	DESCRIPTION AND PARAMETERS
OUT	Show the current input routing for both outputs.
SOURCEDET	Show all source information.
SINKINFO	Show all sink information.
HDCPIN N1 N2	Set the HDCP mode for input N1. N1 = 1~4 [Input number] Available values for N2: 0 [Standard] 1 [Apple Mode]
HDCPIN N1	Show the HDCP settings for input N1. N1 = 1~4 [Input number]
HDCPIN	Show all current HDCP input settings.
EDIDMODE N1	Set the EDID mode. Available values for N1: 0 [Appoint] 1 [All]
EDIDMODE	Show the current EDID mode setting.
EDIDALL N1	Set the EDID to use in "All" mode. Available values for N1: 0 [SINK A] 1 [SINK B] 2 [720P] 3 [1080P] 4 [4K_3G] 5 [4K_Y420] 6 [4K_6G]
EDIDALL	Show the current EDID selection for "All" mode.

COMMAND	DESCRIPTION AND PARAMETERS
EDIDIN N1 N2	Set the EDID to use in "Appoint" mode. N1 = 1~4 [Input number] Available values for N2: 0 [SINK A] 1 [SINK B] 2 [720P] 3 [1080P] 4 [4K_3G] 5 [4K_Y420] 6 [4K_6G]
EDIDIN N1	Show the current EDID selection for input N1 in "Appoint" mode.
EDIDIN	Show the current EDID selections for all inputs in "Appoint" mode.
FADEFAULT	Reset the unit to the factory defaults.
REBOOT	Reboot the unit.
VER	Show the unit's current firmware version.
IPCONFIG	Show the current IP configuration.
SIPADDR N1	Set the static IP Address. N1 = X.X.X.X [X = 0~255]
SNETMASK N1	Set the Ethernet netmask. N1 = X.X.X.X [X = 0~255]
SGATEWAY N1	Set the Ethernet gateway. N1 = X.X.X.X [X = 0~255]
HTTPPORT N1	Set the HTTP port. N1 = 0~65535
TELNETPORT N1	Set the Telnet port. N1 = 0~65535


COMMAND	DESCRIPTION AND PARAMETERS
IPMODE N1	Set the current IP address mode. Available values for N1: 0 [Static IP] 1 [DHCP]
READMAC	Show the unit's MAC address.
UPDATE	Update firmware.

Note: Commands will not be executed unless followed by a carriage return. Commands are not case-sensitive.

4.7 Telnet Control

Before attempting to use Telnet control, please ensure that both the unit and the PC/Laptop are connected to the same active networks.

To access Telnet in Windows 7, click on the "Start" menu and type "cmd" in the search field, then press "Enter". Under Windows XP go to the "Start" menu, click on "Run", type "cmd" then press "Enter". Under Mac OS X, go to "Go→Applications→Utilities→Terminal". See below for reference.

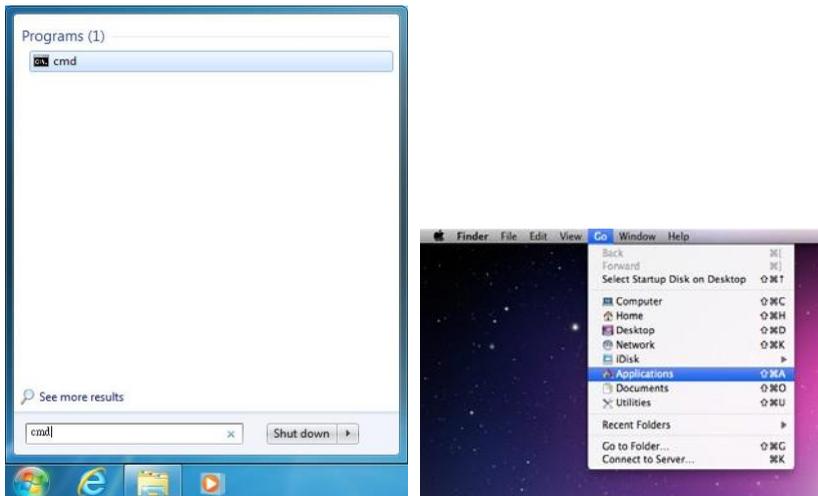

Once in the CLI (Command Line Interface) type "Telnet" followed by the IP address of the unit and "23", then hit "Enter".

```
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\Administrator>telnet 192.168.1.50 23
```

This will connect us to the unit we wish to control. Type "help" to list the available commands.

Notes:

- *Commands will not be executed unless followed by a carriage return. Commands are not case-sensitive.*
- *If the IP address is changed then the IP address required for Telnet access will also change accordingly.*

4.8 WebGUI Control

4.8.1 Device Discovery APP

Please obtain the "Device Discovery" software from your authorized dealer and save it in a directory where you can easily find it.

Connect the unit and your PC/Laptop to the same active network and execute the "Device Discovery" software. Click on "Find Devices on Network" and a list of devices connected to the local network will show up indicating their current IP address. (The unit's default IP address is 192.168.1.50)

Find Devices on Network			
Product Name	Description	IP Address	MAC Address


By clicking on one of the listed devices you will be presented with the network details of that particular device.

Product ID
 Product Name
 MAC Address 00:00:00:00:00:00
 IP Address
 Subnet Mask
 Gateway IP
 DNS
 IP Mode Static
 Web GUI Port
 Telnet Port 0
 S / N
 Firmware Version
 Hardware Version
 Description
 Web GUI [Web GUI](#)
 Save Reboot

- **IP Mode:** If you choose, you can alter the static IP network settings for the device, or switch the unit into DHCP mode to automatically obtain proper network settings from a local DHCP server. To switch to DHCP mode, please select DHCP from the IP mode drop-down, then click "Save" followed by "Reboot".
- **WebGUI:** Once you are satisfied with the network settings, you may use them to connect via Telnet or WebGUI. The network information window provides a convenient link to launch the WebGUI directly.

4.8.2 WebGUI Control Page

All functions, including power, input selection, EDID management, HDCP management, Ethernet settings, and reset/firmware functions, are presented on a single web page to allow for intuitive operation. The individual functions will be introduced in the following sections.

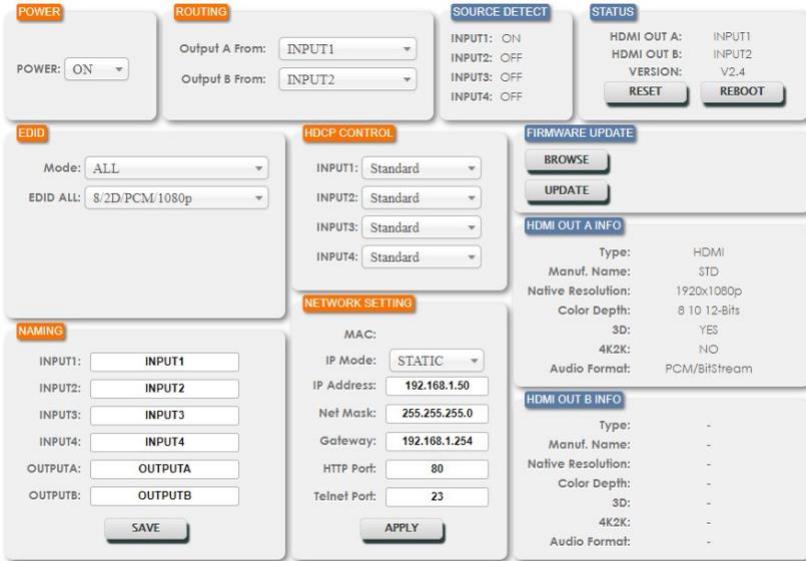

1. Power

The unit can be powered on or off (stand-by mode) from this tab.



2. Routing


This tab allows for the selection of the input source for each output. Four HDMI inputs and two HDMI outputs are available for selection.



3. EDID


This tab controls EDID management for the unit. All inputs can share the same assigned EDID, or each input can have a discrete EDID assigned to it.

- **ALL:** Selecting the “ALL” mode will send the selected EDID to all inputs.
- **APPOINT:** Selecting the “APPOINT” mode allows for each input to have a different EDID assigned to it.

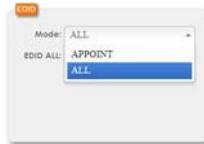

The available EDID options are:

- **SINK A:** EDID is passed from the currently connected display
- **SINK B:** EDID is passed from the currently connected display
- **8/2D/PCM/720p:** 720p@60Hz, 8-bit & LPCM2.0
- **8/2D/PCM/1080p:** 1080p@60Hz, 8-bit & LPCM2.0
- **8/2D/PCM2/4K 3G:** 4K@30Hz, 8-bit & LPCM2.0
- **8/2D/PCM2/4K Y420:** 4K@60Hz (4:2:0), 8-bit & LPCM 2.0
- **8/2D/PCM/4K 6G:** 4K@60Hz (4:4:4), 8-bit & LPCM2.0

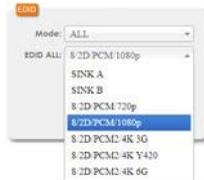

4. HDCP Control

This tab allows for the HDCP mode to be switched between “Standard” and “Apple” mode. “Apple” mode allows for the display of non-HDCP required content from Apple, and similar, devices on non-HDCP displays. This setting can be assigned individually to each input.



5. Naming

This tab allows for the renaming of the four HDMI input ports and the two HDMI output ports. Please click the “SAVE” button to store the changes.



6. Network Setting

This tab provides control over the unit's network settings. The IP mode can be set to DHCP for automatic IP configuration, if your local network supports it, or it can be placed into STATIC mode. When in STATIC mode the IP address, netmask and gateway can be defined manually. The HTTP and Telnet ports can also be changed from their defaults here.



7. Source Detect

When a live input source is detected on one of the 4 HDMI inputs the corresponding input in this tab will display "ON". If no source is detected on that input, it will display "OFF".



8. Status

This tab displays the currently selected HDMI input sources for each output and the unit's firmware version. It also provides a way to reset or reboot the unit.

- **RESET:** To perform a factory reset on the unit, please click the "RESET" button.
- **REBOOT:** To reboot the unit, please click the "REBOOT" button.



9. Firmware Update


This tab provides a way to update the firmware of the unit.

- **BROWSE:** Click the "BROWSE" button to select the firmware update *.bin file which is located on your local PC.
- **UPDATE:** Click the "UPDATE" button to begin the firmware update process.




10. HDMI Out A Info & HDMI Out B Info

These tabs present the information detected from displays connected to HDMI outputs A & B, including type, manufacturer name, native resolution, color depth, 3D support, 4K support and audio format support.

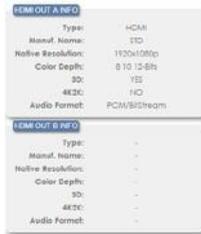

7. CONNECTION DIAGRAM

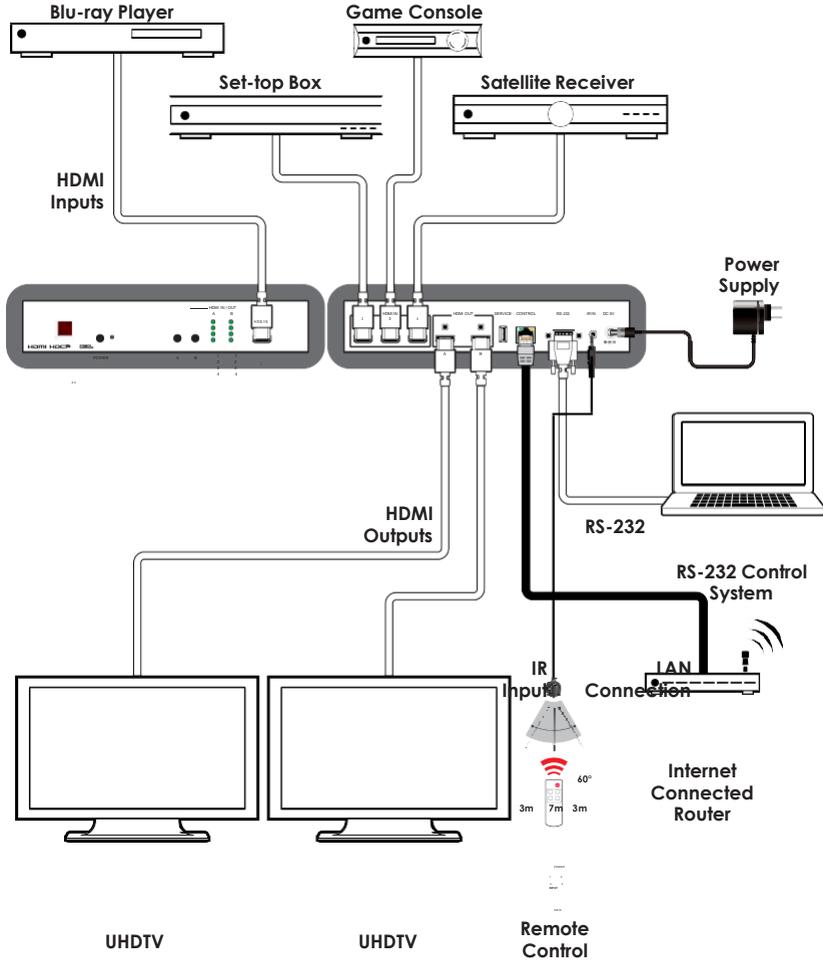

8. SPECIFICATIONS

8.1 Technical Specifications

Video Bandwidth	600MHz/18Gbps
Input Ports	4×HDMI
Output Ports	2×HDMI
Control Interfaces	1×IR Extender (3.5mm) 1×RS-232 (9-pin D-sub) 1×IP Control (RJ45)
Supported Resolutions	480i@60Hz - 4K@60Hz (4:4:4, 8-bit) VGA@60Hz - WUXGA@60Hz (RB)
HDMI Cable Length	10m (1080p@60Hz, 12-bit) 3m (4K@60Hz, 4:4:4, 8-bit)
IR Frequency	30 - 50kHz (30 - 60kHz under ideal conditions)
Baud Rate	115200bps
Power Supply	5V/2.6A DC (US/EU standards, CE/FCC/UL certified)
ESD Protection	Human Body Model: ±12kV (Air Discharge) ±8kV (Contact Discharge)
Dimensions	240mm×43mm×104mm (W×H×D) [Case Only] 240mm×48mm×112.2mm (W×H×D) [All Inclusive]
Weight	796g
Chassis Material	Metal
Silkscreen Color	Black
Operating Temperature	0°C - 40°C/32°F - 104°F
Storage Temperature	-20°C - 60°C/-4°F - 140°F

Relative Humidity 20 - 90% RH (Non-condensing)

Power Consumption 7.106W

8.2 Video Specifications

Supported PC Resolutions (Hz)	Input	Output
640×480@60/72/75/85	✓	✓
800×600@56/60/72/75/85	✓	✓
1024×768@60/70/75/85	✓	✓
1280×1024@60	✓	✓
1366×768@60	✓	✓
1600×1200@60	✓	✓
1920×1200@60 (RB)	✓	✓

Supported TV Resolutions (Hz)	Input	Output
480i@60	✓	✓
576i@50	✓	✓
480p@60	✓	✓
576p@50	✓	✓
720p@50/60	✓	✓
1080i@50/60	✓	✓
1080p@24/25/30/50/60	✓	✓
3840×2160p@50/60 (4:2:0)	✓	✓
4096×2160p@50/60 (4:2:0)	✓	✓
3840×2160p@24/25/30/50/60	✓	✓
4096×2160p@24/50/60	✓	✓

9. ACRONYMS

ACRONYM	COMPLETE TERM
CLI	Command Line Interface
DVI	Digital Visual Interface
EDID	Extended Display Identification Data
GUI	Graphical User Interface
HD	High-Definition
HDCP	High-bandwidth Digital Content Protection
HDMI	High-Definition Multimedia Interface
HDR	High Dynamic Range
HTTP	HyperText Transfer Protocol
IP	Internet Protocol
IR	Infrared
LAN	Local Area Network
LPCM	Linear Pulse-Code Modulation
PC	Personal Computer
UHD	Ultra-High-Definition
USB	Universal Serial Bus
VGA	Video Graphics Array (640×480@60Hz)
WUXGA	Wide Ultra Extended Graphics Array (1920×1200@60Hz)

Customer Service

The return of a product to our Customer Service implies the full agreement of the terms and conditions hereinafter. These terms and conditions may be changed without prior notice.

① Warranty

The limited warranty period of the product is fixed 3 (three) years.

② Scope

These terms and conditions of Customer Service apply to the customer service provided for the products or any other items sold by authorized distributor only.

③ Warranty Exclusions:

Warranty expiration.

Factory applied serial number has been altered or removed from the product.

Damage, deterioration or malfunction caused by:

- ✓ Normal wear and tear.
- ✓ Use of supplies or parts not meeting our specifications.
- ✓ No certificate or invoice as the proof of warranty.
- ✓ The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
- ✓ Damage caused by force majeure.
- ✓ Servicing not authorized by distributor.
- ✓ Any other causes which does not relate to a product defect.

Shipping fees, installation or labor charges for installation or setup of the product.

④ Documentation:

Customer Service will accept defective product(s) in the scope of warranty coverage at the sole condition that the defeat has been clearly defined, and upon reception of the documents or copy of invoice, indicating the date of purchase, the type of product, the serial number, and the name of distributor.

Remarks: For further assistance or solutions, please contact your local distributor.

KanexPro™

Brea,

California

www.kanexpro.com