

# KanexPro®

## HDMMX88-4K Modular Matrix Switcher

User Manual



**All Rights Reserved**

Version: HDMMX88-4K\_2015V2.5

## **Preface**

Read this user manual carefully before using this product. Pictures shown in this manual is for reference only, different model and specifications are subject to real product.

This manual is only for operation instruction only, not for any maintenance usage. The functions described in this version are updated until August 2015. Any changes of functions and parameters since then will be informed separately. Please refer to the dealers for the latest details.

**All product function is valid till 2015-8-3.**

## **Trademarks**

Product model, and logo are trademarks. Any other trademarks mentioned in this manual are acknowledged as the properties of the trademark owner. No part of this publication may be copied or reproduced without prior written consent.

## **FCC Statement**

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference.

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.



## **SAFETY PRECAUTIONS**

To ensure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.

## **Contents**

1. Introduction .....	3
1.1. About Modular Matrix Switcher 8x8 (with Audio).....	3
1.2. Features .....	3
1.2.1. Modular Matrix Switcher signal card (changeable cards) .....	4
1.4 Package List .....	4
2. Panel Description.....	6
2.1. Modular Matrix Switcher 8x8 (with Audio).....	6
2.1.1. Front Panel .....	6
2.1.2. Rear Panel.....	7
2.2. Changeable Cards.....	7
2.2.1. 4I-DV & 4O-DV .....	7
2.2.2. 4I-DS& 4O-DS .....	9
2.2.3. 4I-HD & 4O-HD.....	10
2.2.4. 4I-HS & 4O-HS.....	11
2.2.5. 4I-VG & 4O-VG.....	11
2.2.6. 4I-VA.....	<b>Error! Bookmark not defined.</b>
2.2.7. 4I-SD & 4O-SD .....	13
2.2.8. 4I-SS .....	14
2.2.9. 4I-TP & 4O-TP .....	14
2.2.10. 4I-UH & 4O-UH.....	15
2.2.11. 4I-UF & 4O-UF .....	16
2.2.12. 4I-BT & 4O-BT.....	17
2.2.13. AU88 Stereo Audio (MMX88A Only) .....	17
3. System Connection.....	19
3.1. Usage Precautions .....	19
3.2. Connection Diagram .....	19
3.3. Application .....	19
4. Control Operations.....	20
4.1. Front Panel Button control .....	20
4.2. IR Remote control.....	21
4.3. RS232 Control .....	21

## **KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)**

---

4.3.1. Connection of RS232 Communication Port .....	21
4.3.2. RS232 Communication Commands .....	22
4.4. TCP/IP Control (Optional) .....	31
4.4.1. Control Modes .....	31
4.4.2. Control Modular Matrix Switcher 8x8 (with Audio) via TCP/IP communication software .....	32
4.4.3. TCP/IP Configuration .....	33
5. Specification .....	35
5.1. Main Unit .....	35
5.2. Changeable Cards .....	35
5.2.1. 4I-DV & 4O-DV .....	35
5.2.2. 4I-DS & 4O-DS .....	36
5.2.3. 4I-HD & 4O-HD .....	36
5.2.4. 4I-HS & 4O-HS .....	37
5.2.5. 4I-VG & 4O-VG .....	37
5.2.6. 4I-VA .....	38
5.2.7. 4I-SD & 4O-SD .....	38
5.2.8. 4I-SS .....	39
5.2.9. 4I-TP & 4O-TP .....	39
5.2.10. 4I-UH & 4O-UH .....	39
5.2.11. 4I-UF & 4O-UF .....	40
5.2.12. 4I-BT & 4O-BT .....	41
5.2.13. AU88 (Modular Matrix Switcher 8x8 (with Audio) Only) .....	42
6. Troubleshooting & Maintenance .....	43
7. After-sales Service .....	45

## **1. Introduction**

### **1.1. About The HDMMX88-4K (with Audio)**

The KanexPro HDMMX88A-4K is an eight input by eight output modular matrix switcher chassis with two input slots and two output slots; each modular input or output card supports up to four device connections. As an add-on to front panel control, the HDMMX88A-4K can be controlled via IR, RS232, or TCP/IP connections.

The optional modular input cards include the following connections: HDMI, DVI, VGA, HDBaseT (with RS232 and bi-directional wide-band IR), Fiber Optic and analog video with digital scaling via HD15 (VGA-UXGA, RGBHV, RGSB, RGSBs, component video, S-video and composite video). The modular output cards include the following connections: HDMI, SDI, DVI, VGA, HDBaseT and Fiber Optic. Stereo audio embedding is supported on the HDMI input cards to allow analog audio to be inserted into the digital signal. Stereo audio can also be de-embedded using the HDMI or HDBaseT output cards. Advanced EDID management restricts sources to output only stereo audio, while emulating the native video data from the attached displays. This system allows analog audio to be switched with the paired digital video, eliminating the requirement for an additional audio matrix switcher.

### **1.2. Features**

- Customizable 8x8 modular switch serving various AV connections
- 4K UHD resolution via HDMI & HDBaseT
- Supported connections: VGA, SDI, DVI, HDMI, HDBaseT & Fiber optic
- High-bandwidth up to 10.2 Gbps
- Add I/O modular cards based on expandability
- Cross-point ultra-switching
- Advanced HDCP & EDID management
- Hot swappable design
- Clear illuminated buttons
- Control via IR, Ethernet & RS-232
- 10 global presets
- Front panel LCD for switching & status
- Front panel security lock

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

- 2U rack-mountable aluminum enclosure
- Dual-Internal power supply (100Volt~240Volt AC, 50/60Hz)

### 1.2.1. Modular Matrix Switcher signal card (changeable cards)

Modular Matrix Switcher 8x8 (with Audio) supports multiple signal cards as listed in the following charts:

#### Input Cards

Spec Models	Inputs	Signal Format
4I-HD	4	HDMI
4I-HS	4	HDMI& analog audio
4I-DV	4	DVI
4I-DS	4	DVI, HDMI, VGA, AV, YPbPr
4I-VG	4	VGA
4I-VA	4	VGA& analog audio
4I-SD	4 inputs& LOOP	SDI
4I-SS	4 inputs& LOOP	SDI
4I-TP	4	HDMI TP, IR, RS232
4I-UH	4	HDMI& analog Audio
4I-UF	4	Optical Fiber
4I-BT	4	HDBT, RS232, Audio

#### Output Cards

Spec Models	Outputs	Signal Format
4O-HD	4	HDMI
4O-HS	4	HDMI& analog audio
4O-DV	4	DVI
4O-DS	4	DVI, HDMI, VGA, AV, YPbPr
4O-VG	4 VGA& Stereo audio	VGA, analog audio
4O-SD	4 outputs& LOOP	SDI
4O-TP	4	HDMI TP, IR, RS232
4O-UH	4	HDMI& analog Audio
4O-UF	4	Optical Fiber
4O-BT	4	HDBT, RS232, Audio

### 1.4 Package List

- 1 x Modular Matrix Switcher 8x8 (with Audio)
- 1 x IR remote (Not include battery)
- 1 x Power Cord
- 4 x Plastic cushions

## **KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)**

---

- 1 x RS232 cable
- 1 x User manual

**Notes:** Confirm all the accessories are included, if not, please contact with the dealers.



## 2. Panel Description

### 2.1. Modular Matrix Switcher 8x8 (with Audio)

#### 2.1.1. Front Panel


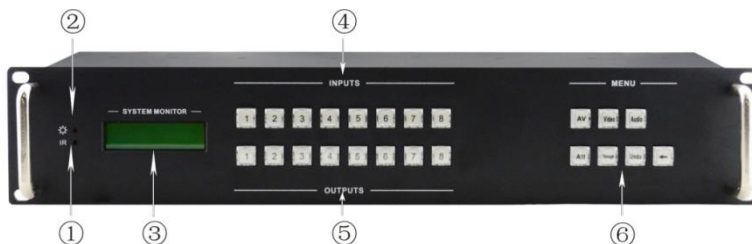


Figure 2- 1 Front Panel of Modular Matrix Switcher 8x8 (with Audio)

No.	Name	Description
①	IR	IR sensor, receive IR signal sent from IR remote
②	Power indicator	Illuminate red once powered on
③	LCD screen	Display real-time operation status
④	INPUTS	Back-lit buttons for input selection, ranges from 1~ 8, correspond to 1~8 sources on input signal cards (counting from left to right, top to bottom)
⑤	OUTPUTS	Back-lit buttons for output selection, ranges from 1~ 8, correspond to 1~8 displays on output signal cards (counting from left to right, top to bottom)
⑥	MENU	<b>AV:</b> Transfer AV signal from AV signal card& audio signal from audio card synchronously
		<b>VIDEO:</b> Transfer AV signal from AV signal card only
		<b>AUDIO:</b> Transfer audio signal from audio card only
		<b>ALL:</b> Select all input/output channel
		<b>THROUGH:</b> To transfer the signals directly to the corresponding output channels.
		<b>UNDO:</b> Undo button, to resume to the status before the command just performed.
		<b>←:</b> Backspace button, to backspace the last press.

**2.1.2. Rear Panel**

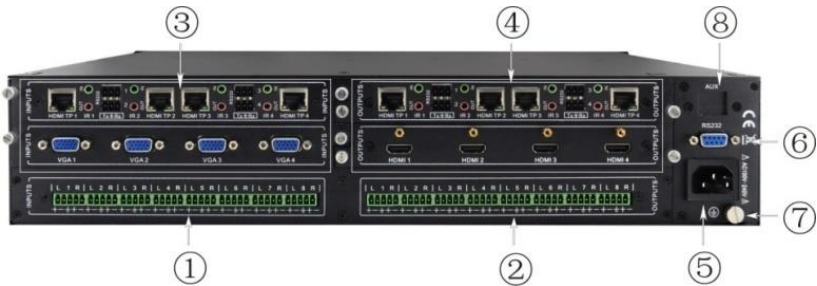

**Figure 2- 2 Rear Panel of Modular Matrix Switcher 8x8 (with Audio)**

No.	Name	Description
①	INPUTS	Audio input slot
②	OUTPUTS	Audio output slot
③	INPUTS	Input signal card slots, 2 in total, insert necessary input cards here
④	OUTPUTS	Output signal card slots, 2 in total, insert necessary output cards here
⑤	Power port	Connect with household alternating current power
⑥	RS232	Serial control port; connect with RS232 port of control device.
⑦	GND connector	Used for system grounding
⑧	TCP/IP	(Optional) Used for TCP/IP control port

**2.2. Changeable Cards**

Modular Matrix Switcher 8x8 (with Audio) support expansion through various changeable input/ output cards of different signals including DVI, HDMI, VGA, and twisted pair, SDI etc. Here is a brief introduction to the changeable cards.

**2.2.1. 4I-DV & 4O-DV**

DVI signal card. (Please check the specification from 5.2.1)

It is fully compatible with HDMI1.3 and HDCP, but not supporting analog signal.

It is embedded EDID management technology, supporting DDC.

**4I-DV:** input card, maximum four input signal. Input signal can pass to output device through 4O-DV or other kinds of output cards.

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)



**40-DV:** output card, maximum four output signal, output signals from 4I-DV, or other kinds of input cards.



Pin Layout of the DVI-I connector (Dual-Link). (Female)



Pin	Function	Pin	Function
1	T.M.D.S.Data2-	13	T.M.D.S.Data3+
2	T.M.D.S.Data2+	14	+5V Power
3	T.M.D.S. Data 2/4 Shield	15	Ground (return for +5V, Hsync and Vsync)
4	T.M.D.S. Data 4-	16	Hot Plug Detect
5	T.M.D.S. Data 4+	17	T.M.D.S. Data 0-
6	DDC Clock	18	T.M.D.S. Data 0+
7	DDC Data	19	T.M.D.S. Data 0/5 Shield
8	Analog Vertical Sync	20	T.M.D.S.Data5-
9	T.M.D.S.Data1-	21	T.M.D.S.Data5+
10	T.M.D.S.Data1+	22	T.M.D.S. Clock Shield
11	T.M.D.S.Data1/3 Shield	23	T.M.D. S. Clock +
12	T.M.D.S.Data3-	13	T.M.D.S.Data3+
C1	RED	C2	Analog Green
C3	Analog Blue	C4	Horizontal Sync Analog
C5	GND		

**Note:** Pin C1~C5 are not used in 4I-DV & 4O-DV.


### 2.2.2. 4I-DS& 4O-DS

Seamless DVI signal card. (Please check the specification from 5.2.2)


It is fully compatible with HDMI1.3& HDCP, and supports seamless transmission for high-definition DVI, HDMI, VGA, AV, YPbPr signals. Signal format can be modified via RS232 commands.

It boasts embedded EDID management (only for HDMI/ DVI signal), supporting DDC.

**4I-DS:** seamless input card, maximum four input signal. It can automatically identify the format of input signal. Input signal can pass to output device through 4O-DS, or other kinds of output cards.



**4O-DS:** seamless output card, maximum four output signal. Automatically recognize output signal (HDMI/ DVI), and output resolution is adjustable. Output signal can come from 4I-DS, or from other kinds of input cards. It supports off memory for resolution, signal format, HDCP compliant status.



#### Note:

1. When 4O-DS works with input cards except 4I-DS, to ensure reliable seamless output, adjust the input signals to any one of the following 5 resolutions: 1024x768, 1280x720, 1600x1200, 1920x1080, 1920x1200.
2. Before using 4O-DS, upgrade the front-board and backboard of MMX88A. Seek technical assistant from our technical supporters.
3. DVI interfaces on the signal card are same with the interfaces on 4I-DV& 4O-DV. Pin C1~C5 are used in 4I-DS & 4O-DS.

When connecting to VGA, YPbPr or C-VIDEO signal, insert converting cables according to specific pin definitions (see the figures below):

DVI- C-VIDEO:



Pin	Signal
C1	Yellow
C5	GND
Other pins are unused.	

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

DVI- YPbPr:



Pin	Signal	Pin	Signal
C1	RED	C2	GREEN
C3	BLUE	C5	GND
Other pins are unused.			

DVI- VGA (female):




Pin	Signal	Pin	Signal
C1	RED	C2	GND
C3	GREEN	C4	Horizontal Sync Analog
8	Vertical Sync Analog		
Other pins are unused.			

### 2.2.3. 4I-HD & 4O-HD

HDMI signal card. (Please check the specification from 5.2.3)

It boasts embedded EDID management, and supports DDC. It's also compliant with DVI signal & HDCP.


**4I-HD:** input card, maximum four input signal. Input signal can pass to output device through 4O-HD, or other kinds of output cards.



**4O-HD:** output card, maximum four output signal, output signals from 4I-HD, or other kinds of input cards.



Pin layout of the HDMI connectors (female).

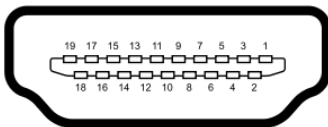

No.	Signal	No.	Signal
1	TMDS Data 2+	20	SHELL
2	TMDS Data 2 Shield	19	Hot Plug Detect
3	TMDS Data 2-	18	+5V Power
4	TMDS Data 1+	17	Ground
5	TMDS Data 1 Shield	16	DDC Data
6	TMDS Data 1-	15	DDC Clock

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

7	TMDS Data 0+	14	No Connect
8	TMDS Data 0 Shield	13	CEC
9	TMDS Data 0-	12	TMDS Clock-
10	TMDS Clock+	11	TMDS Clock Shield

### 2.2.4. 4I-HS & 4O-HS

Seamless HDMI signal card with auxiliary audio port (Please check the specification from 5.2.4)

It boasts seamless switch that provides real-time audio & video switching; support HDMI 1.3 & HDCP 1.2, compliant with DVI signal;

HDMI embedded audio and auxiliary stereo audio supports PCM format, audio source selectable via designed command (default: HDMI embedded audio);

Built in scaler handles various resolution, output resolution adjustable via command.

**4I-HS:** input card, maximum four input signal. Input signal can pass to output device through 4O-HS, or other kinds of output cards.



**4O-HS:** output card, maximum four-output signal, output signals from 4I-HS, or other kinds of input cards.



HDMI connectors of 4I-HS & 4O-HS are same with the 4I-HD & 4O-HD.

**Note:** When 4O-HS works with input cards except 4I-HS, to ensure reliable seamless output, adjust all the input signals to the same designed resolution: 1024x768, 1280x720, 1600x1200, 1920x1080, or 1920x1200.

### 2.2.5. 4I-VG & 4O-VG

VGA signal card. (Please check the specs from 5.2.5)

Scale all inputs to 1080p or 1920x1200

The bandwidth is up to 350MHz (-3dB);

Input signal can be VGA (RGBHV), YPbPr, S-video, C-video or CVBS;

Output card only supports VGA output

**4I-VG:** input card, maximum four input signal, support VGA (RGBHV), YPbPr, S-video,

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)


C-video& CVBS. Input signal can pass to output device through any kinds of output cards.



**40-VG:** output card, maximum four VGA output signal and 4 stereo audio outputs, output video signal from 4I-VG, or other kinds of input cards, and output audio signal from the audio of the input signal.



Pin layout of the VGA connectors (female):

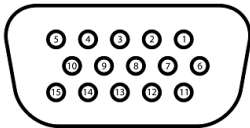

Pin	Signal	Pin	Signal
1	RED	9	KEY/PWR
2	GREEN	10	GND
3	BLUE	11	ID0/RES
4	ID2/RES	12	ID1/SDA
5	GND	13	HSync
6	RED_RTN	14	VSynC
7	GREEN_RTN	15	ID3/SCL
8	BLUE_RTN		

When connecting to YPbPr or C-VIDEO signal, insert converting cables according to specific pin definitions (see the figures below):

VGA- YPbPr:



Pin	Signal	Pin	Signal
1	RED	6	GND
2	GREEN	7	GND
3	BLUE	8	GND
Other pins are not used.			

VGA- C-VIDEO:



Pin	Signal	Pin	Signal
1	RED	6	GND
7	GND	8	GND
Other pins are not used.			

### 2.2.6. MOD-IN-VGA

VGA signal card. (Please check the specification from 5.2.6)

Scale all inputs to 1080p or 1920x1200;

Input signal can be VGA (RGBHV), YPbPr, S-video, C-video or CVBS;

4 stereo audio inputs.

**4I-VA:** input card, maximum four VGA inputs and four stereo audio inputs. Input signal can pass to output device through any kinds of output cards.



The VGA connector and source connection are same with the 4I-VG.


### 2.2.7. 4I-SD & 4O-SD

SDI signal card. (Please check the specification from 5.2.7)


It is compatible with different SDI signal formats, including SD/HD/3G-SDI (adaptive)

Every port has loop output for local monitoring.

**4I-SD:** input card, maximum four input signal. Input signal can pass to output device through 4O-SD, or other kinds of output cards.




**4O-SD:** output card, maximum four-output signal, output signals from 4I-SD, or other kinds of input cards.





The BNC connector is shown as the figure below.

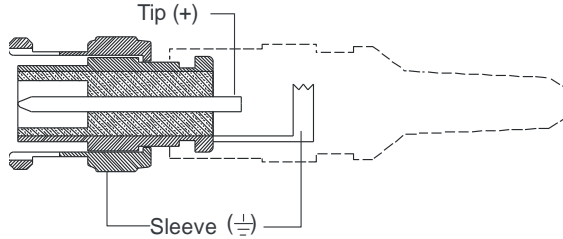

BNC Connector

## 2.2.8. 4I-SS

Seamless SDI signal card (Please check the specification from 5.2.8)

It is compatible with different SDI signal formats, including SD/HD/3G-SDI (adaptive), support seamless transmission for high-definition signal up to 1080p;

Auto-detect input resolution and scale to 1080p@60Hz (default resolution, adjustable via command);

Every port has loop output for local monitoring.

**4I-SS:** input card, maximum four input signal. Input signal can pass to output device through 4O-SD, or other kinds of output cards.




BNC connectors are same with 4I-SD & 4O-SD's.

## 2.2.9. 4I-TP & 4O-TP

Twisted pair card (HDMI/DVI extender). (Please check the specification from 5.2.9)


Support HDTV, compatible with HDMI1.3 and HDCP

**4I-TP:** input card, maximum input four HDMI TP signal. Input signal can pass to output device through 4O-TP, or other kinds of output cards, need to work with HDBT Transmitters.



**4O-TP:** output card, maximum output four HDMI TP signal, output signals from 4I-TP, or other kinds of input cards, need to work with HDBT Receivers.


## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)



### How the indicators work:

Color	Definition	Status
<b>Yellow</b>	Power Indicator	Blink once powered on; Turn off when there is no power.
<b>Green</b>	Link Indicator	Light when the port is connected with CAT5e/6; Turn off when there is no connection.

Pin layout of the HDBT connector:

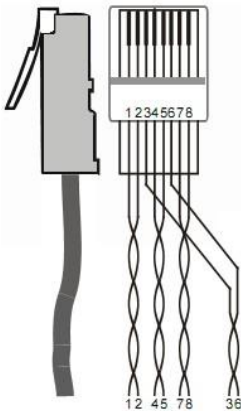

Pin	Color
1	orange white
2	orange
3	green white
4	blue
5	blue white
6	green
7	brown white
8	brown

1st Group	4--5
2nd Group	1--2
3rd Group	3--6
4th Group	7--8

**Notice:** Cable connectors MUST be metal one, and the shielded layer of cable MUST be connected to the connector's metal shell, to well share the grounding.

### 2.2.10. 4I-UH & 4O-UH

4K HDMI signal card. (Please check the specification from 5.2.10)

Support HDMI 1.4a& HDCP 1.4 compliance; Compatible with DVI signal; Support high-definition HDMI source up to 4kx2k, 1080p 3D compliance;

Provide auxiliary audio port as supplement to HDMI embedded audio, audio source selectable via command "AUDIO [X] I[Z].", [X] stands for output port, [Z] stands for audio source (0 is for HDMI embedded audio, 1 is for analog audio)

It also boasts embedded EDID management.

**4I-UH:** input card, maximum four input signal. Input signal can pass to output device through 4O-UH, or other kinds of output cards.

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)



**Note:** When matching with output cards that do not support 4kx2k, adjust the input resolution to 1080p to enable reliable output.

**4O-UH:** output card, maximum four output signal, output signals from 4I-UH, or other kinds of input cards, HDCP compliant status settable via RS232 command



The HDMI connector is same with 4I-HD& 4O-HD's.


### 2.2.11. 4I-UF & 4O-UF

4K optical signal card. (Please check the specification from 5.2.11)


Work with single-mode/ multi-mode module to realize long-distance optical fiber transmission, support multi-mode transmission up to 300m and single mode transmission up to 1km.

High bandwidth: 10.2Gbps; Compliant with HDMI 1.4, capable to transmit 4Kx2K& 1080P 3D (max) signals;

**4I-UF:** input card with indicators, maximum four input signal, and corresponding indicator illuminates green when there is input signal. Input signal can pass to output device through 4O-UF, or pass through other kinds of output cards.

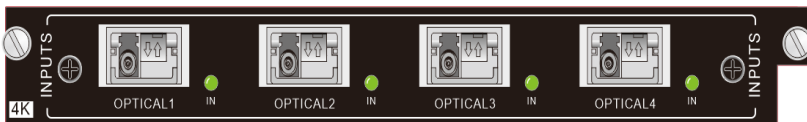

**4O-UF:** output card with indicators, maximum four output signal, output signals from 4I-UF, or other kinds of input cards; corresponding indicator illuminates green when there is output signal.

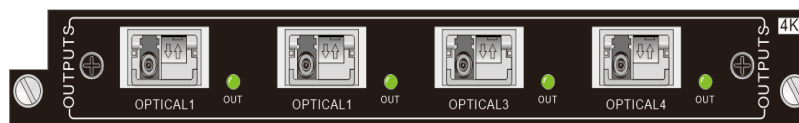

### **Note:**

1. Use the 4I-UF/ 4O-UF with optical fiber transmitter/ receiver.

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

- Multi-mode transmission may include the following cases:  
Single-mode optical fiber module& Multi-mode optical fiber cable  
Multi-mode optical fiber module& Multi-mode optical fiber cable
- Before using 4I-UF & 4O-UF, upgrade the front-board and backboard of MMX88A.  
Seek technical assistant from our technical supporters.


### 2.2.12. 4I-BT & 4O-BT

4K Twisted pair card (Please check the specification from 5.2.12)

Support HDTV, compatible with HDBT 1.0, HDMI1.4a& HDCP1.4; Wide resolution range from 480p~ 4kx2k, 1080p 3D compliant; Extend HDBT signal up to 70m at 1080p or 40m at 4k; Bi-directional RS232 transmission on single cable; Audio source selectable via corresponding command; Auxiliary audio ports support stereo signal.


It also boasts embedded EDID management.

**4I-BT:** input card, maximum input four HDBT signal. Input signal can pass to output device through 4O-BT, or other kinds of output cards, need to work with HDBT transmitters.



**Note:** When matching with output cards that do not support 4kx2k, adjust the input resolution to 1080p to enable reliable output.

**4O-BT:** output card, maximum output four HDBT signal, output signals from 4I-BT, or other kinds of input cards, need to work with HDBT receivers.



The indicators and pin layout is the same with 4I-TP & 4O-TP's. Refer to 2.2.9 4I-TP & 4O-TP for detailed information.

### 2.2.13. AU88 Stereo Audio (MMX88A Only)

8x8 stereo audio cross point switching card. (Please check the specification from 5.2.13)


It supports the balanced/unbalanced audio, by different connection.

It is not a hot plug card, fixed on the chassis.



## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)


Balanced Audio Connection:



Balanced Input

Balanced Output

Unbalanced Audio Connection:



Unbalanced Input

Unbalanced Output

### 3. System Connection

#### 3.1. Usage Precautions

- 1) System should be installed in a clean environment and has a prop temperature and humidity.
- 2) All of the power switches, plugs, sockets and power cords should be insulated and safe.
- 3) All devices should be connected before power on.

#### 3.2. Connection Diagram

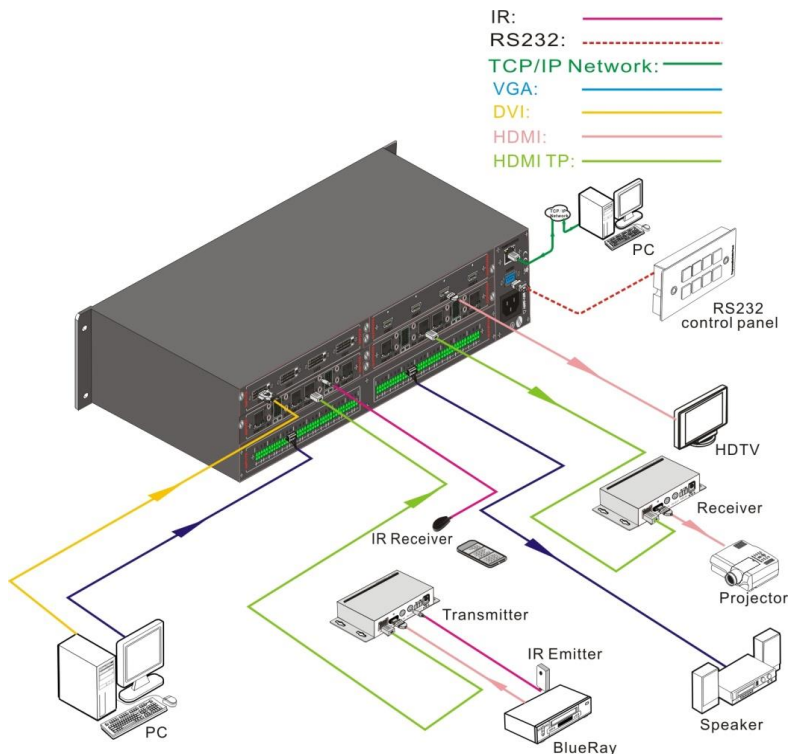


Figure 3- 1 System Diagram

**Note:** All the input/output signal cards don't support hot-plug while input& output ports on the cards support hot-plug.

#### 3.3. Application

Modular Matrix Switcher series has a good application in various occasions, such as radio & television, multi-media meeting room, big screen displaying, television education and command & control center etc.

## **4. Control Operations**

### **4.1. Front Panel Button control**

Users can control Modular Matrix Switcher 8x8 (with Audio) rapidly and directly with its front panel buttons. Here is a brief operation guide to front panel buttons.

Format: **“Input Channel”** + **“Switch Mode”** + **“Output Channel”**

#### **Note:**

**1) “Switch Mode”:**

AV: Transfer AV signal from AV signal card& audio signal from audio card synchronously

Video: Transfer AV signal from AV signal card

Audio: Transfer audio signal from audio card

**2) “Input Channel”:** Fill with the number of input channel to be controlled,

**3) “Output Channel”:** Fill with the number of output channels to be controlled. Press “All” to select all the outputs.

**4) The input/output channels on the rear panel are counting from left to right, top to bottom.**

**5) The input delay time between two numbers of every input& output channel must be less than 5 seconds; otherwise the operation will be cancelled.**

#### **Example:**

1. To transfer input 1 to output 1, press input “1”, output “1”.
2. To transfer signals from input 1 to all output channels, press buttons in this order: “1”, “All”.

#### **Functional Buttons:**

**UNDO** button: return to the previous status

Example: Input 6 is connecting with output 6, press input “6” + “AV”+ output 4 to change the connection. Press “Undo” to enable input 6 to reconnect with output 6.

**←** Button: If you press buttons “1”, “AV”, “2”, “←” in order, then “2” will be canceled.

**THROUGH** button: get straight I/O connection, e.g. input 1-> output 1, input 2-> output 2.

Press “Input Channel “+”Through”


Example: If you press buttons “ALL”, “THROUGH” in order, then the result will be like input 1→ output 1, input 2→output 2, input 3→output 3 ... input 8→output 8.

## 4.2. IR Remote control

With the IR remote, Modular Matrix Switcher 8x8 (with Audio) could be controlled remotely. As the function buttons on the IR remote are the same with the ones on the front panel, the IR remote shares the same operations and commands with the control panel.

Press the buttons under below format:

**“Input Channel” + “Switch Mode” + “Output Channel”**

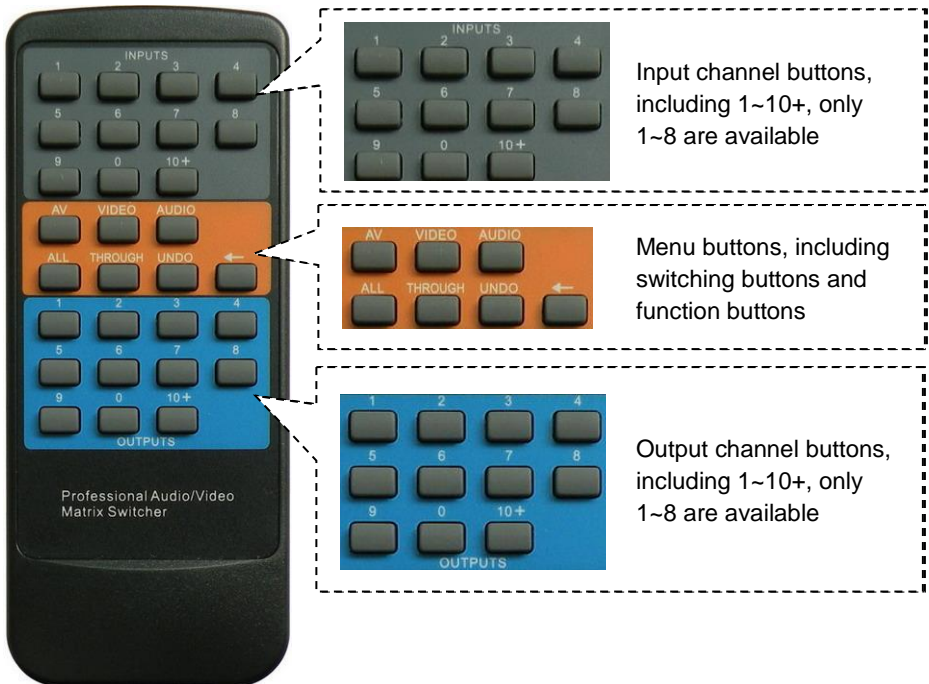

**Figure 4- 1 Panel of the IR Remote**


## 4.3. RS232 Control

### 4.3.1. Connection of RS232 Communication Port

Except the front control panel and IR remote, Modular Matrix Switcher 8x8 (with Audio) can be controlled by far-end control system or through the Ethernet control via the RS-232 communication port.

This RS-232 communication port is a female 9- D connector. The definition of its pin layout is shown in the table below.



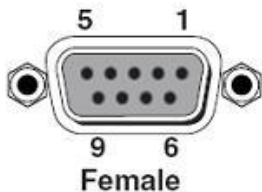

No.	Pin	Function
1	N/u	Unused
2	Tx	Transmit
3	Rx	Receive
4	N/u	Unused
5	Gnd	Ground
6	N/u	Unused
7	N/u	Unused
8	N/u	Unused
9	N/u	Unused

When Modular Matrix Switcher 8x8 (with Audio) connects to the RS232 port of a computer with control software, users can control it by that computer. To control the switcher, users need to use RS232 control software.

### 4.3.2. RS232 Communication Commands

With this command system, users are able to control and operate the Modular Matrix Switcher 8x8 (with Audio) with RS232 software remotely.

#### Note:

1. Please disconnect all the twisted pairs before sending command EDIDUpgrade[X].
2. In the commands, “[” and “]” are symbols for easy reading and do not need to be typed in actual operation.
3. Please remember to end the commands with the ending symbols “.” or “;”.
4. Type the command carefully, it is case-sensitive.
5. Commands pertaining to EDID only available for signal cards that support EDID management.
6. Modular Matrix Switcher 8x8 (with Audio) boasts 6 in-built EDID data; the chart below illustrates the detailed information:

No.	Detailed Information
1	1080p 2D 5.1CH
2	1080p 2D 2.0CH
3	720p 2D 5.1CH
4	720p 2D 2.0CH
5	4kx2k 2D 5.1CH
6	4kx2k 2D 2.0CH

Update in-built EDID data by sending command **UpgradeIntEDID[x]..**

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

**Communication protocol:** Baud rate: 9600; Data bit: 8; Stop bit: 1; Parity bit: none.

<b>Command</b>	<b>Description</b>	<b>Feedback</b>
/*Type;	Inquire the models information.	MODULAR88A
/%Lock;	Lock front panel buttons.	System Locked!
/%Unlock;	Unlock front panel buttons.	System Unlock!
/^Version;	Inquire the firmware version.	Vx.x.x
/:MessageOff;	Turn off the feedback command from the com port. It will only show "switcher OK".	Closed The Message Return.
/:MessageOn;	Turn on the feedback command from the com port.	Enabled The Message Return.
Undo.	Cancel the previous operation.	Undo
Demo.	Switch to the "demo" mode, 1->1, 2->2, 3->3 ... and so on.	Demo Mode AV: 01->001 ... ..
[x]All.	Transfer signals from the input channel [x] to all output channels	01 To All
All#.	Transfer all input signals to the corresponding output channels respectively.	All Through.
All\$.	Switch off all the output channels.	All Closed.
[x]#.	Transfer signals from the input channel [x] to the output channel [x].	01 Through.
[x]\$.	Switch off the output channel [x].	AV: 01 Closed.
All@.	Switch on all the output.	All Open.
[x]@.	Switch on output [x].	01 Open.
[x1]V[x2].	Transfer the video signals from input [x1] to output [x2].	V: 01->001
[x1]A[x2].	Transfer the audio signals from the input channel [x1] to the output channel [x2].	A: 01->001
[x1]B[x2].	Transfer audio& video signal from input [x1] to output [x2].	AV: 01->001
Status[x].	Inquire the input channel to the output channel [x].	V: 01->001 A: 01->001
Status.	Inquire the input channel to the output channels one by one.	V: 01->001 A: 01->001 ... ..

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

Save[Y].	Save the present operation to the preset command [Y]. [Y] ranges from 0 to 9.	Save To F8
Recall[Y].	Recall the preset command [Y].	Recall From F8 V: 01->001 A: 01->001 ... ..
Clear[Y].	Clear the preset command [Y].	Clear F8
PWON.	Work normally.	PWON
PWOFF.	Enter in standby mode.	PWOFF
HDCPON.	Turn on the HDCP output.	HDCPON
HDCPOFF.	Turn off the HDCP output.	HDCPOFF
/V00.	Inquire the version of backboard software.	Vx.x.x
UpgradeIntEDID[x].	Upgrade built-in EDID data. Supports 6 types of EDID data (see <i>Note 6</i> ). When the switcher gets the command, it will show a message to send EDID file (.bin file).	
EDIDUpgrade[x].	Upgrade EDID data of input ports When the switcher gets the command, it will show a message to send EDID file (.bin file). Operations will be canceled after 10 seconds.	
EDID/[x]/[y].	Set the EDID data of input port [x] to built-in EDID data of type [y]. [y]= 1~6.	
EDIDG[x].	Get EDID data from output [x] and display the data on serial port control software.	
EDIDMInit.	Reset factory default EDID for every input channel.	EDIDMInit
EDIDM[X]B[Y].	Manually EDID switching. Enable input [Y] to learn the EDID data of output[X]. If there is problem learning the EDID data, it will automatically set the default EDID data for input [Y].	EDIDM2B1
USER/[Y]/[X]:****;	Custom command for signal cards, [Y]=I/O; [X]= port number; ****. User-definable command, e.g. 0623%	

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

0911%.	Restore factory default. All I/O connection will be restored to straight through: 1->1, 2->2,...; saved operation status will remain the same.	
<b>4I-HS</b>		
USER/I/[x]:02xx%;	Set the brightness of input [x] to xx, xx=00~99	02xx%
USER/I/[x]:03xx%;	Set the contrast of input [x] to xx, xx=00~99	03xx%
USER/I/[x]:04xx%;	Set the saturation of input [x] to xx, xx=00~99	04xx%
USER/I/[x]:05xx%;	Set the sharpness of input [x] to xx, xx=00~99	05xx%
USER/I/[x]:0607%;	Set picture's color temperature	0607%
USER/I/[x]:0608%;	Configure image scale	0608%
USER/I/[x]:0614%;	Configure picture mode	0614%
USER/I/[x]:0617%;	Restore input [x] to factory default.	0617%
USER/I/[x]:0619%;	Set the resolution of input [x] to 1360x768, HD	0619%
USER/I/[x]:0626%;	Set the resolution of input [x] to 1024x768, XGA	0626%
USER/I/[x]:0627%;	Set the resolution of input [x] to 1280x720, 720P	0627%
USER/I/[x]:0628%;	Set the resolution of input [x] to 1280x800, WXGA	0628%
USER/I/[x]:0629%;	Set the resolution of input [x] to 1920x1080, 1080P	0629%
USER/I/[x]:0620%;	Set the resolution of input [x] to 1920x1200, WUXGA	0620%
USER/I/[x]:0621%;	Set the resolution of input [x] to 1600x1200, UXGA	0621%
USER/I/[x]:0698%;	Software update	0698%
USER/I/[x]:0686%;	Set the output signal of input [x] to HDMI	0686%
USER/I/[x]:0711%;	Select HDMI embedded audio as audio source	0711%
USER/I/[x]:0712%;	Select analog audio as audio source	0712%
<b>4O-HS</b>		
USER/O/[x]:0804%;	Set the resolution of output [x] to 1280x720P @60Hz	Resolution Out03 1280x720P

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

USER/O/[x]:0813%;	Set the resolution of output [x] to 1280x1080P @60Hz	Resolution Out03 1920x1080P
USER/O/[x]:0824%;	Set the resolution of output [x] to 1024x768 @60Hz	Resolution Out03 1024x768
USER/O/[x]:0826%;	Set the resolution of output [x] to 1280x1024 @60Hz	Resolution Out03 1280x1024
USER/O/[x]:0837%;	Set the resolution of output [x] to 1920x1200 @60Hz	Resolution Out03 1920x1200
USER/O/[x]:0617%;	Restore output [x] to factory default.	0617%
GetResolution[x].	Capture output resolution of output [x]	
USER/O/[x]:0110%;	Enable analog audio output	0110%
USER/O/[x]:0111%;	Disable analog audio output	0111%
<b>4I-VA</b>		
USER/I/[x]:0648%;	Switch on audio of input [x]	0648%
USER/I/[x]:0649%;	Switch <b>off</b> audio of input [x]	0649%
USER/I/[x]:0684%;	Set the color space to YCBCR	0684%
USER/I/[x]:0685%;	Set the color space to RGB	0685%
USER/I/[x]:0686%;	Set the input signal to HDMI	0686%
USER/I/[x]:0687%;	Set the input signal to DVI	0687%
USER/I/[x]:0622%;	Set the signal of input channel [x] to VGA.	0622%
USER/I/[x]:0623%;	Set the signal of input channel [x] to YCBCR.	0623%
USER/I/[x]:0624%;	Set the signal of input channel [x] to SVIDEO.	0624%
USER/I/[x]:0625%;	Set the signal of input channel [x] to CVIDEO.	0625%
USER/I/[x]:0626%;	Set the resolution of input [x] to 1024x768@60Hz.	0626%
USER/I/[x]:0627%;	Set the resolution of input [x] to 1280X720@60Hz.	0627%
USER/I/[x]:0628%;	Set the resolution of input [x] to 1280X800@60Hz.	0628%
USER/I/[x]:0619%;	Set the resolution of input [x] to 1360X768@60Hz.	0619%
USER/I/[x]:0621%;	Set the resolution of input [x] to 1600X1200@60Hz.	0621%
USER/I/[x]:0629%;	Set the resolution of input [x] to 1920X1080@60Hz.	0629%
USER/I/[x]:0620%;	Set the resolution of input [x] to 1920X1200@60Hz.	0620%

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

USER/I/[x]:0617%;	Restore input [x] to factory default.	0617%
USER/I/[x]:0606%;	Auto-adjust VGA signal	0606%
USER/I/[x]:0698%;	Update software	0698%
<b>4I-VG</b>		
USER/I/[x]:0622%;	Set the signal of input channel [x] to VGA.	0622%
USER/I/[x]:0623%;	Set the signal of input channel [x] to YCBCR.	0623%
USER/I/[x]:0624%;	Set the signal of input channel [x] to SVIDEO.	0624%
USER/I/[x]:0625%;	Set the signal of input channel [x] to CVIDEO.	0625%
USER/I/[x]:0626%;	Set the resolution of input [x] to 1024x768@60Hz.	0626%
USER/I/[x]:0627%;	Set the resolution of input [x] to 1280X720@60Hz.	0627%
USER/I/[x]:0628%;	Set the resolution of input [x] to 1280X800@60Hz.	0628%
USER/I/[x]:0629%;	Set the resolution of input [x] to 1920X1080@60Hz.	0629%
<b>4I-SS</b>		
USER/I/[x]:02xx%;	Set the brightness of input [x] to xx, xx=00~99	02xx%
USER/I/[x]:03xx%;	Set the contrast of input [x] to xx, xx=00~99	03xx%
USER/I/[x]:04xx%;	Set the saturation of input [x] to xx, xx=00~99	04xx%
USER/I/[x]:05xx%;	Set the sharpness of input [x] to xx, xx=00~99	05xx%
USER/I/[x]:0607%;	Set picture's color temperature	0607%
USER/I/[x]:0608%;	Configure image scale	0608%
USER/I/[x]:0614%;	Configure picture mode	0614%
USER/I/[x]:0617%;	Restore input [x] to factory default.	0617%
USER/I/[x]:0619%;	Set the resolution of input [x] to 1360x768, HD	0619%
USER/I/[x]:0626%;	Set the resolution of input [x] to 1024x768, XGA	0626%
USER/I/[x]:0627%;	Set the resolution of input [x] to 1280x720, 720P	0627%
USER/I/[x]:0628%;	Set the resolution of input [x] to 1280x800, WXGA	0628%

**KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)**

USER/I/[x]:0629%;	Set the resolution of input [x] to 1920x1080, 1080P	0629%
USER/I/[x]:0620%;	Set the resolution of input [x] to 1920x1200, WUXGA	0620%
USER/I/[x]:0621%;	Set the resolution of input [x] to 1600x1200, UXGA	0621%
USER/I/[x]:0698%;	Software update	0698%
<b>4I-DS</b>		
USER/I/[x]:02xx%;	Set the brightness of input [x] to xx, xx=00~99	02xx%
USER/I/[x]:03xx%;	Set the contrast of input [x] to xx, xx=00~99	03xx%
USER/I/[x]:04xx%;	Set the saturation of input [x] to xx, xx=00~99	04xx%
USER/I/[x]:05xx%;	Set the sharpness of input [x] to xx, xx=00~99	05xx%
USER/I/[x]:0606%;	Auto-adjust VGA input signal	0606%
USER/I/[x]:0607%;	Set picture's color temperature	0607%
USER/I/[x]:0608%;	Configure image scale	0608%
USER/I/[x]:0614%;	Configure picture mode	0614%
USER/I/[x]:0617%;	Restore input [x] to factory default.	0617%
USER/I/[x]:0619%;	Set the resolution of input [x] to 1360x768, HD	0619%
USER/I/[x]:0626%;	Set the resolution of input [x] to 1024x768, XGA	0626%
USER/I/[x]:0627%;	Set the resolution of input [x] to 1280x720, 720P	0627%
USER/I/[x]:0628%;	Set the resolution of input [x] to 1280x800, WXGA	0628%
USER/I/[x]:0629%;	Set the resolution of input [x] to 1920x1080, 1080P	0629%
USER/I/[x]:0620%;	Set the resolution of input [x] to 1920x1200, WUXGA	0620%
USER/I/[x]:0621%;	Set the resolution of input [x] to 1600x1200, UXGA	0621%
USER/I/[x]:0698%;	Software update	0698%
USER/I/[x]:0686%;	Set the output signal of input [x] to HDMI	0686%
USER/I/[x]:0687%;	Set the output signal of input [x] to DVI	0687%
<b>4O-DS</b>		

**KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)**

USER/O/[x]:0201%;	Set the input source of output [x] to YPbPr	0201%
USER/O/[x]:0202%;	Set the input source of output [x] to VGA	0202%
USER/O/[x]:0203%;	Set the input source of output [x] to C-VIDEO	0203%
USER/O/[x]:0804%;	Set the resolution of output [x] to 1280x720P @60Hz	Resolution Out03 1280x720P
USER/O/[x]:0813%;	Set the resolution of output [x] to 1280x1080P @60Hz	Resolution Out03 1920x1080P
USER/O/[x]:0824%;	Set the resolution of output [x] to 1024x768 @60Hz	Resolution Out03 1024x768
USER/O/[x]:0826%;	Set the resolution of output [x] to 1280x1024 @60Hz	Resolution Out03 1280x1024
USER/O/[x]:0837%;	Set the resolution of output [x] to 1920x1200 @60Hz	Resolution Out03 1920x1200
GetResolution[x].	Capture output resolution of output [x]	
GetVGAPortMode[x].	Inquire the output status of VGA port [x]	
USER/O/[x]:0617%;	Restore output [x] to factory default.	0617%
<b>4I-UH/BT</b>		
AUDIO[X]I[Z].	Select audio source for input [X] [X] is port number; [Z] stands for audio source, can be 0 (embedded HDMI audio) or 1 (analog audio)	AUDIO1I0.

**Examples:**

**1、 Transfer signals from an input channel to all output channels: [x]All.**

Example: Send "3All." to transfer signals from the input 3 to all output channels.

**2、 Transfer all input signals to corresponding output channels respectively: All#.**

Example: If this command is carried out, the status of matrix will be: 1->1, 2->2, 3->3, 4->4..... 8->8.

**3、 Switch off all the output channels: All\$.**

Example: After running this command, there will be no signals on all the outputs.

**4、 Switch off the detail feedback command from the COM port: /:MessageOff;**

But, it will leave the "switch OK" as the feedback, when you switch the matrix.

**5、 Switch on the detail feedback command from the COM port: /:MessageOn;**



## **KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)**

---

It will show the detail switch information when it switch. Example: when switch 1->2, it will feedback "AV01 to 02".

### **6、 Transfer signals from an input channel to corresponding output channel: [x]#.**

Example: "5#." to transfer signals from the input 5 to the output 5.

### **7、 Switch off an output channel: [x]\$.**

Example: "5\$." to switch off the output 5.

### **8、 Switch signal: [x1] B[x2].**

Example: "1B2,3,5." to transfer signal from the input 1 to the output No. 2,3,5.

### **9、 Inquire the input channel to the output channel [x]: Status[x].**

Example: Send "Status2." to inquire the input channel to the output 2.

### **10、 Inquire the input channel to the output channels one by one: Status.**

Example: "Status." to inquire the input channel to the output channels one by one.

### **11、 Save the present operation to the preset command [Y]: Save[Y].**

Example: "Save7." to save the present operation to the preset command No.7.

### **12、 Recall the preset command [Y]: Recall[Y].**

Example: "Recall5." to recall the preset command No.5.

### **13、 Clear the preset command [Y]: Clear[Y].**

Example: "Clear5." to clear the preset command No.5.

### **14、 EDID management command:. EDIDM[X]B[Y].**

Example: "EDIDM5B3." to enable input 3 to learn the EDID data of output 5.

### **15、 Command for signal cards: USER/[Y]/[X]\*\*\*\*\*.**

Example: "USER/1/7:0623%;" to set the input 7 to support YPbPr signal, the card is plugged in the second input slot of the matrix.

**Note:** If there is any empty input card or output card, and send the command "ALL#." It will be taken and the result is as 1->1, 2->2, 3->3..., but actually there is no input/output signal at this card.


## 4.4. TCP/IP Control (Optional)

### 4.4.1. Control Modes

TCP/IP default settings: IP is 192.168.0.178, Gateway is 192.168.0.1, and Serial Port is 4001. IP & Gateway can be changed as you need, Serial Port cannot be changed.

- **Controlled by Single PC**

Connect a computer to the **TCP/IP** port of the Modular Matrix Switcher 8x8 (with Audio), and set its network segment to the same as the default IP of the Modular Matrix Switcher 8x8 (with Audio) (192.168.0.178).

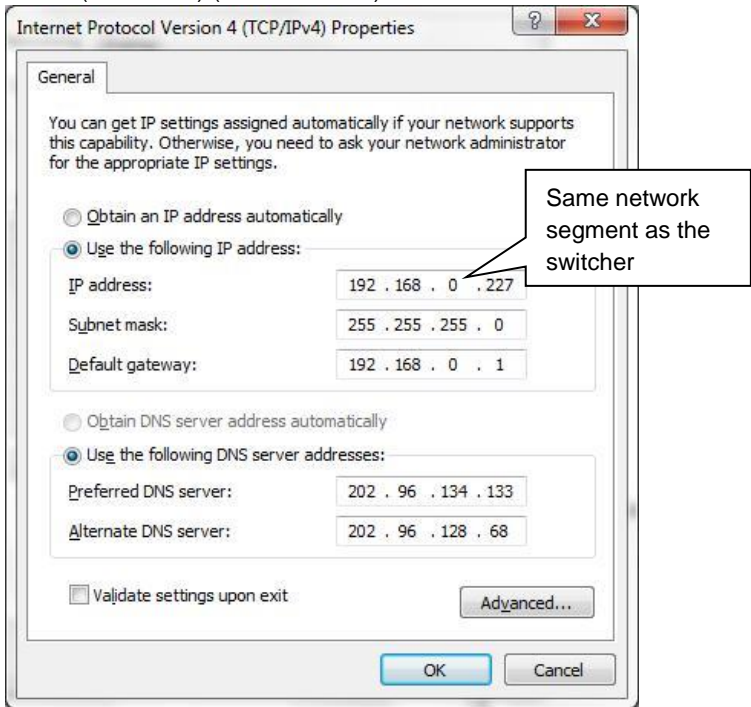


- **Controlled by PC(s) in LAN**

The Modular Matrix Switcher 8x8 (with Audio) can be connected with a router to make up a LAN with the PC(s), this make it able to be controlled in a LAN. When control, just make sure the Modular Matrix Switcher 8x8 (with Audio)'s network segment is the same with the router. Please connect as the following figure for LAN control.

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

---

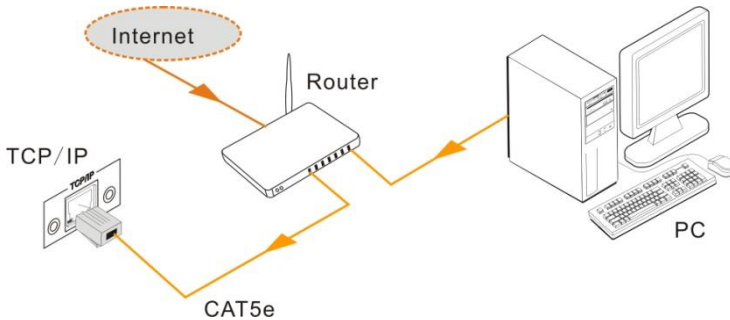

- Step1.** Connect the TCP/IP port of the Modular Matrix Switcher 8x8 (with Audio) to Ethernet port of PC with twisted pair.
- Step2.** Set the PC's network segment to the same as the Modular Matrix Switcher 8x8 (with Audio). Do please remember the PC's original network segment.
- Step3.** Set the Modular Matrix Switcher 8x8 (with Audio)'s network segment to the same as the router.
- Step4.** Set the PC's network segment to the original one.
- Step5.** Connect the Modular Matrix Switcher 8x8 (with Audio) and PC(s) to the router. In the same LAN, each PC is able to control the Modular Matrix Switcher 8x8 (with Audio) asynchronously.


Then it's able to control the device via a TCP/IP communication software.

### 4.4.2. Control Modular Matrix Switcher 8x8 (with Audio) via TCP/IP communication software


(Exemplified by TCPUDP software)

- 1) Connect a computer and Modular Matrix Switcher 8x8 (with Audio) to the same network. Open the TCPUDP software (or any other TCP/IP communication software) and create a connection, enter the IP address and port of Modular Matrix Switcher 8x8 (with Audio) (default IP: 192.168.0.178, port:4001):

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

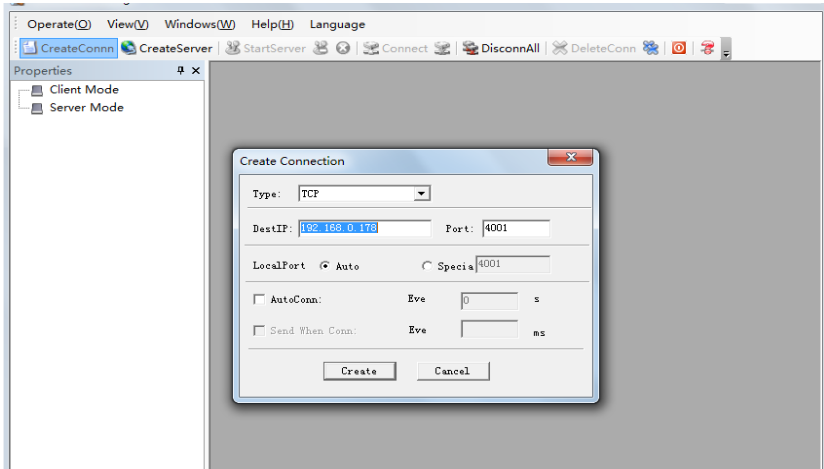

- 2) After connect successfully, we can enter commands to control the Modular Matrix Switcher 8x8 (with Audio), as below:

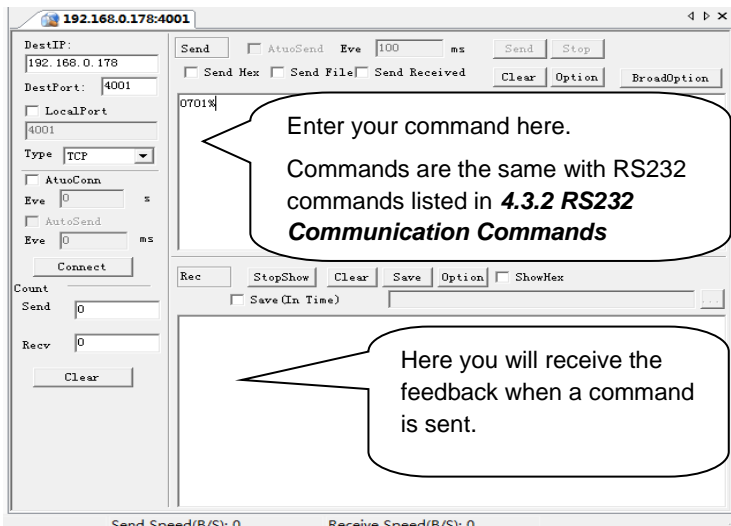


### 4.4.3. TCP/IP Configuration

Type the designed website [192.168.0.178:100](http://192.168.0.178:100) in your browser. Enter correct username and password to log in the WebServer:

**Username:** admin; **Password:** admin

Here is the main configuration interface of the WebServer:

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

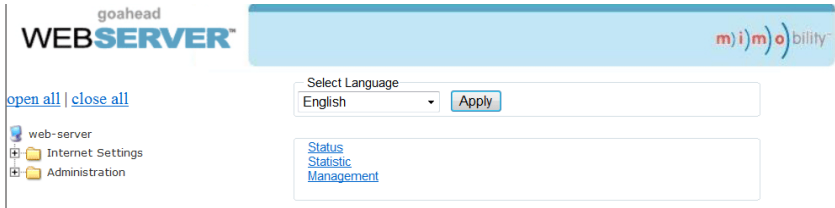

The screenshot displays the web server interface for the KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio). The interface includes a header with the 'goahead' logo and 'WEB SERVER' text, and a 'm) i) m) o) bility' logo. A navigation menu on the left lists 'web-server', 'Internet Settings', and 'Administration'. A language selection dropdown is set to 'English' with an 'Apply' button. Below the dropdown, there are links for 'Status', 'Statistic', and 'Management'.

### In this interface, you can:

- Change website display language
- Modify network settings: Go to Internet Settings -> WAN
- Upgrade TCP/IP module: Go to Administration -> Upload Program -> Select program file -> Start upgrading  
Reboot the device after upgrading.

## 5. Specification

### 5.1. Main Unit

<b>Control parts</b>			
Serial control port	RS232, 9- female D connector	Configurations	2 = TX, 3 = RX, 5 = GND
Installation	Rack Mountable	Front panel control	Buttons
Options	TCP/IP control		
<b>General</b>			
Power Supply	100VAC ~ 240VAC, 50/60Hz	Power Consumption	60W (Max)
Temperature	-10 ~ +40°C	Humidity	10% ~ 90%
Dimension (W*H*D)	483 x 88 x 320mm (2U high)	Weight	3Kg

### 5.2. Changeable Cards

#### 5.2.1. 4I-DV & 4O-DV

<b>4I-DV</b>		<b>4O-DV</b>	
Input	4 DVI	Output	4 DVI
Input Connector	Female DB24+5/HDMI	Output Connector	Female DB24+5/HDMI
Input Level	T.M.D.S. 2.9V~3.3V	output Level	T.M.D.S. 2.9V~3.3V
Input Impedance	75Ω	Output Impedance	75Ω
<b>General</b>			
Gain	0 dB	Bandwidth	340 MHz (10.2 Gbit/s)
Video Signal	DVI 1.0/HDMI 1.3 full digital T.M.D.S signal	Switching Speed	200ns (Max.)
Max Time-delay	5nS (±1nS)	Crosstalk	<-50dB@5MHz
EDID and DDC	Supports Extended Display Identification Data (EDID) and Display Data Channel (DDC) data using DVI and HDMI standards. EDID and DDC signals are actively buffered		
HDCP	Compliant with HDCP using DVI and HDMI 1.3 standards		

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

### 5.2.2. 4I-DS & 4O-DS

4I-DS		4O-DS	
Input	4 DVI	Output	4 DVI
Input Connector	Female DB24+5/HDMI	Output Connector	Female DB24+5/HDMI
Input Level	T.M.D.S. 2.9V~3.3V	Output Level	T.M.D.S. 2.9V~3.3V
Input Impedance	75Ω	Output Impedance	75Ω
<b>General</b>			
Gain	0 dB	Bandwidth	340 MHz (10.2 Gbit/s)
Video Signal	DVI, HDMI, VGA, C-VIDEO, YPbPr	Switching Speed	200ns (Max.)
Max Time-delay	5nS (±1nS)	Crosstalk	<-50dB@5MHz
EDID and DDC	Supports Extended Display Identification Data (EDID) and Display Data Channel (DDC) data using DVI and HDMI standards. EDID and DDC signals are actively buffered		
HDCP	Compliant with HDCP using DVI and HDMI 1.3 standards		

### 5.2.3. 4I-HD & 4O-HD

4I-HD		4O-HD	
Input	4 HDMI	Output	4 HDMI
Input Connector	Female HDMI	Output Connector	Female HDMI
Input Level	T.M.D.S. 2.9V~3.3V	Output Level	T.M.D.S. 2.9V~3.3V
Input Impedance	75Ω	Output Impedance	75Ω
<b>General</b>			
Gain	0 dB	Bandwidth	6.75 Gbps
Video Signal	DVI 1.0/HDMI 1.3 full digital T.M.D.S signal	Max Time-delay	5nS (±1nS)
Switching Speed	200ns (Max.)	Crosstalk	<-50dB@5MHz
EDID and DDC	Supports Extended Display Identification Data (EDID) and Display Data Channel (DDC) data		
HDCP	Compliant with HDCP		

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

### 5.2.4. 4I-HS & 4O-HS

4I-HS		4O-HS	
Input	4 HDMI 4 Analog Audio	Output	4 HDMI 4 Analog Audio
Input Connector	19-pin Type-A Female 3-pin pluggable terminal block	Output Connector	19-pin Type-A Female 3-pin pluggable terminal block
Power Consumption	8W	Power Consumption	12W
Color Depth	8, 10, 12 bit	Color Depth	8 bit
<b>General</b>			
Video Signal	HDMI, DVI	Audio Signal	PCM
Bandwidth	6.75 Gbps	Standards	HDMI1.3& HDCP1.2
Work Temperature	0~50°C	Reference Humidity	10%~90%
EDID and DDC	Supports Extended Display Identification Data (EDID) and Display Data Channel (DDC) data		

### 5.2.5. 4I-VG & 4O-VG

4I-VG		4O-VG	
Input	4 VGA	Output	4 VGA
Input Connector	Female 15 pin HD	Output Connector	Female 15 pin HD
Input Level	0.5 ~ 2.0Vp-p	Output Level	0.5 ~ 2.0Vp-p
Input Impedance	75Ω	Output Impedance	75Ω
Video Signal	VGA (RGBHV), YPbPr, S-video, C-video& CVBS.	Video Signal	VGA
<b>General</b>			
Gain	0 dB	Bandwidth	350MHz (-3dB)
Switching Speed	200ns (Max.)	Crosstalk	<-50dB@5MHz



## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

### 5.2.6. 4I-VA

Video		Audio	
Input	4 VGA	Input	4 Stereo Audio
Input Connector	Female 15 pin HD	Input Connector	3-pin Pluggable Terminal Block
Input Level	0.5 ~ 2.0Vp-p	CMRR	>90dB @20Hz ~ 20KHz
Input Impedance	75Ω	Input Impedance	>10KΩ
General			
Gain	0 dB	Bandwidth	YPbPr:170MHz; C-video:150MHz; VGA:170MHz
Video Signal	VGA (RGBHV), YPbPr, S-video, C-video& CVBS		
Switching Speed	200ns (Max.)	Crosstalk	<-50dB@5MHz

### 5.2.7. 4I-SD & 4O-SD

4I-SD		4O-SD	
Input	4 SDI	Output	4 SDI
Input Connector	Female BNC	Output Connector	Female BNC
Input Level	0.8Vp-p ± 10%	output Level	0.8Vp-p ± 10%
Input Impedance	75Ω	Output Impedance	75Ω
General			
Gain	Unity	Maximum Data Rate	4.95Gbps
Transmission Distance	300M (Max.)	Data rate Lock	Auto
Input Return Loss	<-14 dB @ 1 MHz ~ 1.5 GHz	Input Return Loss	<-14 dB @ 1 MHz ~ 1.5 GHz
Video Standard	SMPTE 292M, SMPTE 259M, SMPTE 424M, ITU-RBT.601, ITU-RBT.1120	Data Type	8bit, 10bit, 12bit
Audio Bits per Sample	18 bits per channel, 2 channels (L, R)		
Switching Speed	200ns (Max.)	Crosstalk	<-50dB@5MHz

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

### 5.2.8. 4I-SS

Input		Output	
Input	4 SDI	Output	4 SDI
Input Connector	Female BNC	Output Connector	Female BNC
General			
Audio Signal	SDI, HD-SDI, 3G-SDI	Color Depth	8, 10, 12 bit
Transmission Distance	1080p $\leq$ 100M	Max Resolution	1080p
Bandwidth	6.75Gbps	Power Consumption	8.7W
Work Temperature	0~50 $^{\circ}$ C	Reference Humidity	10%~90%

### 5.2.9. 4I-TP & 4O-TP

4I-TP		4O-TP	
Input	4 RJ45	Output	4 RJ45
Input Connector	Female RJ45	Output Connector	Female RJ45
Input Impedance	75 $\Omega$	Output Impedance	75 $\Omega$
Video General			
Transmission Distance	1080p $\leq$ 70M	Bandwidth	6.75Gbps
Resolution range	800x600 ~ 1920x1200	Transmission Distance	70M(Max)
SNR	>70dB@ 100MHz-100M	Return Loss	<-30dB@ 5KHz
HDMI Standard	Support HDMI1.3 and HDCP	Differential Phase Error	$\pm 10^{\circ}$ @ 135MHz_100M

### 5.2.10. 4I-UH & 4O-UH

4I-UH			
Video Input		Audio Input	
Input	4 HDMI	Input	4 Analog
Input Connector	Female HDMI	Input Connector	3.5mm pluggable terminal block
Min. ~Max. Level	T.M.D.S. 2.9V~3.3V	Input Impedance	75 $\Omega$

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

Input Impedance	100Ω (Differential)	Frequency Response	20Hz~20K Hz
<b>4O-UH</b>			
<b>Video Output</b>		<b>Audio Output</b>	
Output	4 HDMI	Output	4 Stereo
Output Connector	Female HDMI	Output Connector	3.5mm Stereo audio connector
Min.~Max. Level	T.M.D.S. 2.9V~3.3V	Output Impedance	75Ω
Output Impedance	100Ω (Differential)	Frequency Response	20Hz~20K Hz
<b>General</b>			
Gain	0dB	Max Resolution	4Kx2K
Transmission Distance	1080P≤70m 4Kx2K ≤ 40m	Switching Speed	200ns (Max.)
Work Temperature	0~50℃	Reference Humidity	10%~90%
SNR	>70dB@ 100MHz-100M	Return Loss	<-30dB@ 5KHz
Supported Audio Format	Embedded HDMI audio: PCM, Dobby Digital, DTS, DTS-HD Analog audio: PCM		
HDMI Standard	Support HDMI1.4& DVI1.0		
EDID& HDCP Management	Compliant with HDCP 1.4; Support manual EDID management		

### 5.2.11. 4I-UF & 4O-UF

<b>4I-UF</b>		<b>4O-UF</b>	
Input	4 Fiber Optical	Output	4 Fiber Optical
Input Connector	SPF Fiber Optical Connector	Output Connector	SPF Fiber Optical Connector
Fiber Type	Multi-mode, Single mode	Fiber Type	Multi-mode, Single mode
<b>General</b>			
Data Rate	10.2 Gbps	Color Depth	8bit, 10bit, 12bit, 16bit
Work Temperature	0~55℃	Reference Humidity	10%~90%
<b>Optical Fiber Mode</b>			
Connector	LC connector		
Resolution	Up to 4Kx2K		

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

Transmission Distance	1km (Single mode transmission, using Single Mode Optical Module and OM3 Single Mode Fiber Cable) 300m (Multi-mode transmission, using Single/ Multi mode Optical Module and OM3 Multi-Mode Fiber Cable)
Data Rate	10.2Gbit/s

### 5.2.12. 4I-BT & 4O-BT

<b>4I-BT</b>			
<b>Video Input</b>		<b>Audio Input</b>	
Input	4 HDBT	Input	4 Stereo
Input Connector	4 Female RJ45 (with dual-color indicator)	Input Connector	3.5mm Stereo audio connector
Min.~Max. Level	T.M.D.S 2.9V~3.3V	Input Impedance	75Ω
Input Impedance	100Ω (Differential)	Frequency Response	20Hz~20K Hz
<b>4O-BT</b>			
<b>Video Output</b>		<b>Audio Output</b>	
Output	4 HDBT	Output	4 Stereo
Output Connector	4 Female RJ45 (with dual-color indicator)	Output Connector	3.5mm Stereo audio connector
Min.~Max. Level	T.M.D.S 2.9V~3.3V	Output Impedance	75Ω
Output Impedance	100Ω (Differential)	Frequency Response	20Hz~20K Hz
<b>Control Part</b>			
Control Signal	4 RS232	Control Connector	3-pin pluggable terminal block
Protocol	TCP/IP		
<b>General</b>			
Gain	0dB	Bandwidth	10.2Gbps
Max Resolution	4Kx2K	Crosstalk	<-50dB@5MHz
Transmission Distance	1080P≤70m 4Kx2K ≤ 40m	Switching Speed	200ns (Max.)
Work Temperature	0~50°C	Reference Humidity	10%~90%
Supported Audio Format	Embedded HDMI audio: PCM, Dobby Digital, DTS, DTS-HD Analog audio: PCM		
HDMI	Support HDMI1.4a		

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

Standard	
EDID& HDCP Management	Compliant with HDCP 1.4; Support manual EDID management

### 5.2.13. AU88 (Modular Matrix Switcher 8x8 (with Audio) Only)

Input		Output	
Input	8 stereo	Output	8 stereo
Input Connector	5-pin pluggable terminal block	Output Connector	5-pin pluggable terminal block
Input Impedance	>10K $\Omega$	Output Impedance	50 $\Omega$
General			
Frequency Response	20Hz~20KHz, $\pm$ 0.5dB	CMRR	>90dB@20Hz~20KHz
Stereo Channel Separation	>80dB@1KHz	THD + Noise	1% @ 1 KHz, 0.3% @ 20 KHz at nominal level

## 6. Troubleshooting & Maintenance

<b>Problems</b>	<b>Causes</b>	<b>Solutions</b>
Output image with ghost	Bad quality of the connecting cable	Try another high quality cable
	Improprate image setting of the displayer	Adjust corresponding image settings
Output image with color losing or no video signal output	Fail connection	Reconnect the displayer and the matrix
No output image when switching	No signal at the input / output end	Check with oscilloscope or multimeter if there is any signal at the input/ output end.
	Fail or loose connection	Make sure the connection is good
	The switcher is broken	Send it to authorized dealer for repairing.
IR remote does not work	Run out of battery	Change for another battery
	IR remote is broken	Send it to authorized dealer for repairing.
<b>POWER</b> indicator doesn't work or no respond to any operation	Fail connection of power cord.	Make sure the power cord connection is good.
EDID management does not work normally	The HDMI cable is broken at the output end.	Change for another HDMI cable which is in good working condition.
There is a blank screen on the display when switching	The display does not support the resolution of the video source.	Switch again.
		Manage the EDID data manually to make the resolution of the video source automatically compliant with the output resolution.
Static becomes stronger when connecting the video	Bad grounding	Check the grounding and make sure it is connected

## KanexPro HDMMX88-4K Series Modular Matrix Switcher (with Audio)

connectors		well.
Cannot control the device by control device (e.g. a PC) through RS232 port	Wrong RS232 communication parameters	Type in correct RS232 communication parameters.
	Broken RS232 port	Send it to authorized dealer for checking.
Cannot control the device by front panel buttons while can control it through RS232 port	The front panel buttons are locked	Send command <b>50605%</b> to unlock the front panel buttons.
Cannot control the device by RS232 / IR remote / front panel buttons	The device has already been broken.	Send it to authorized dealer for repairing.

If your problem persists after following the above troubleshooting steps, seek further help from authorized dealer or our technical support.

## **7. After-sales Service**

If there appear some problems when running Modular Matrix Switcher 8x8 (with Audio), please check and deal with the problems referring to this user manual. Any transport costs are borne by the users during the warranty.

**1) Product Limited Warranty:** We warrant that our products will be free from defects in materials and workmanship for **three years**, which starts from the first day the product leaves warehouse (check the SN mark on the product). Proof of purchase in the form of a bill of sale or receipted invoice must be presented to obtain warranty service.

**2) What the warranty does not cover (servicing available for a fee):**

- Warranty expiration.
- Factory applied serial number has been altered or removed from the product.
- Damage, deterioration or malfunction caused by:
  - Normal wear and tear
  - Use of supplies or parts not meeting our specifications
  - No certificate or invoice as the proof of warranty.
  - The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
  - Damage caused by force majeure.
  - Servicing not authorized
  - Any other causes which does not relate to a product defect
- Delivery, installation or labor charges for installation or setup of the product

**3) Technical Support:** Email to our after-sales department or make a call, please inform us the following information about your cases.

- Product version and name.
- Detailed failure situations.
- The formation of the cases.

**Remarks:** For any more questions or problems, please try to get help from your local distributor.